

# UFO High Bay

## INSTRUCTION MANUAL

- Thank you for purchasing our UFO Highbay. Please read the below articles carefully to see how to use this product safely.
- Warning contents and attention contents related to product safety use, please be sure to follow it.

### Warning

- This UFO High bay within the input voltage range:120-277VAC,50/60Hz.
- If input voltage exceeds this range, it may cause light failure. Please be sure to operate under correct input voltage.
- Ensure ambient operating temperature of -40°F(-40°C) through 122°F(50°C).
- Using this UFO High bay in temperatures outside of this range will reduce the UFO High bay lifespan.
- Make sure to turn off power before starting the installation process.


### Attention

- IP rating: IP65, can work under wet locations.
- Please keep the UFO High bay away from any corrosive substance. When you clean it, please use damp or dry cloth.


Input Voltage	AC120-277V			
Frequency	50/60HZ			
Power	100W/125W/150W	100W/150W/200W	150W/200W/240W	300W
Input Current	0.92A/1.15A/1.38A	0.92A/1.38A/1.83A	1.38A/1.83A/2.2A	3.3A
CCT	30K ;40K ;50K			

### Installation Instruction


#### 1. Rings type:

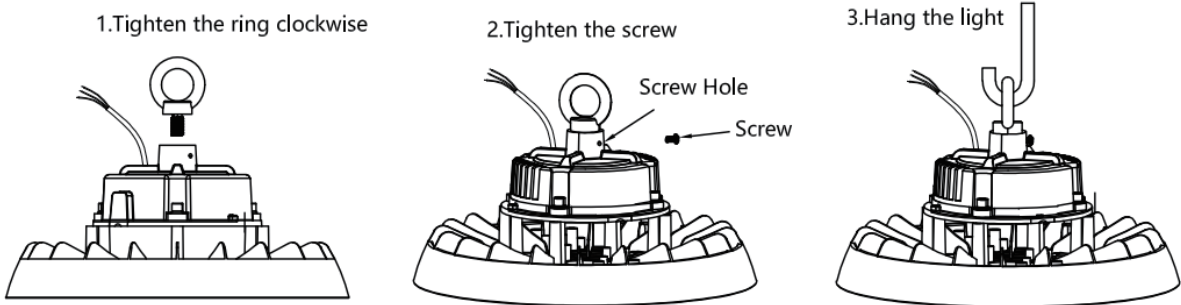

#### 2. Hook type:

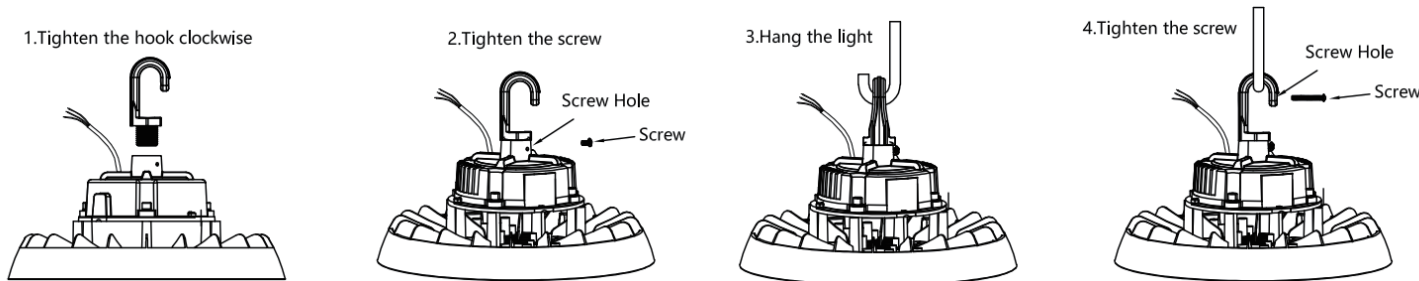


### Product Dimension

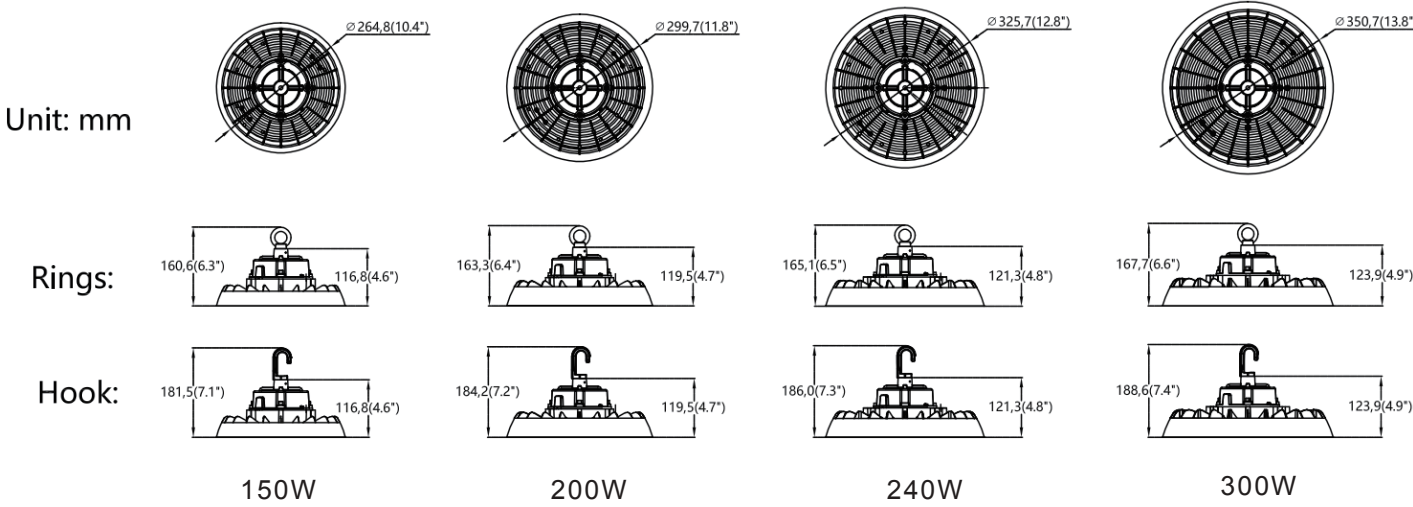


### Watts selected Operation Manual:

#### A/B/C (Minimum / Middle / Maximum wattage)

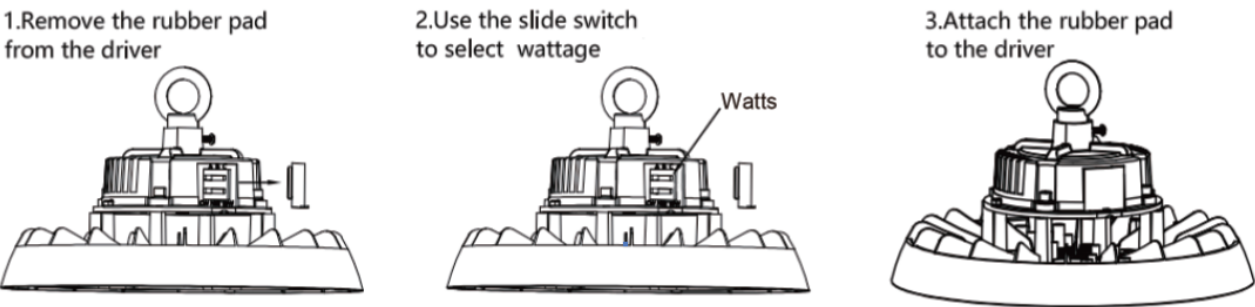


### Wiring Connection

Turn off the power,connect AC wire.  
black wire to L,white wire to N,and green wire to E.  
Connect wires as below,Purple wire is DIM+,  
Pink wire is DIM-, Black/White wire is 12V+

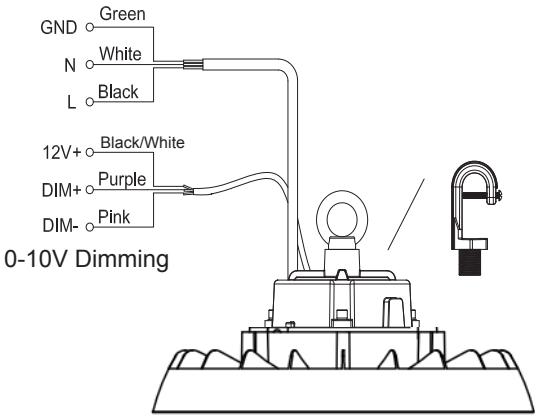

### Twist in sensor installation manual


1. Take out cover cap.
2. Twist in sensor.

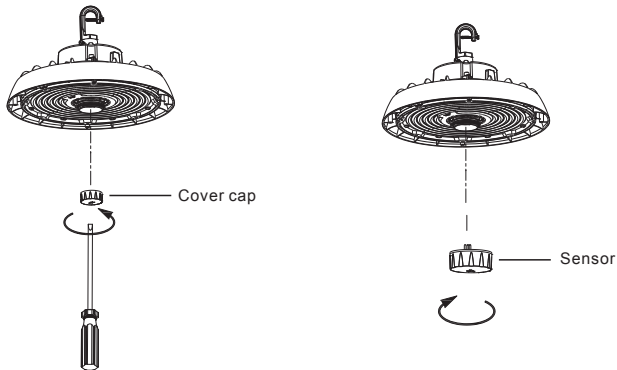

3. Finished installation.

#### Wiring Diagram

**Tip: The above content is for reference only, please take the real thing as the criterion.**

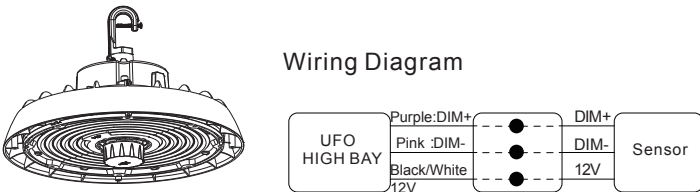

The Installation must be carried out by a qualified electrician.